




## SATO GENERATION 2 - SINGLE OUTLET INSTALLATION GUIDE

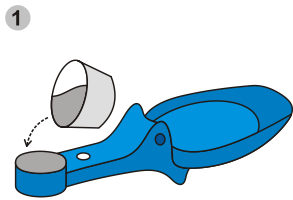


1  
Fill the cup of flap Door with sufficient cement paste

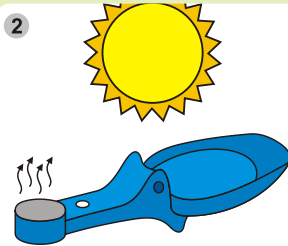


2  
Let it dry

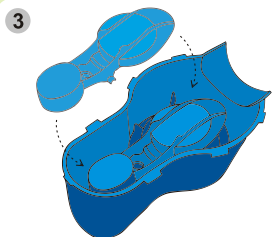


3  
Fix the door in top housing

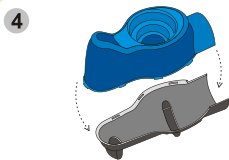


4  
Fix the top housing on lower housing. Ensure the top and bottom housing are locked well, check for snap engagement.

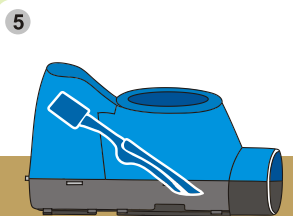

5  
Place the Single Outlet in the foundation

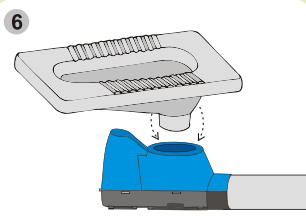


6  
Now attach the pan with opening on the top and pipe on the side

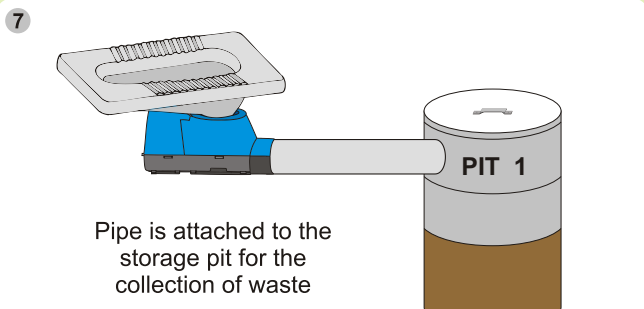


7  
Pipe is attached to the storage pit for the collection of waste


## SATO GENERATION 2 - V-TRAP INSTALLATION GUIDE

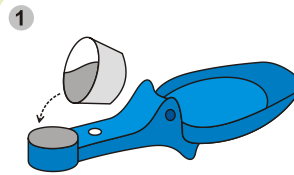


1  
Fill the cup of flap Door with sufficient cement paste

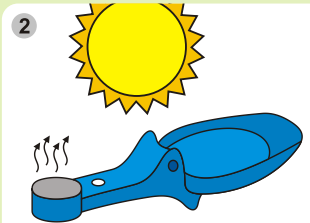


2  
Let it dry

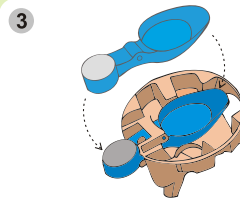


3  
Fix the flap Door in the swivel bucket

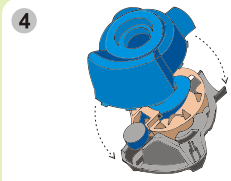


4  
Fix the bucket to the lower housing and attach the upper housing from the top

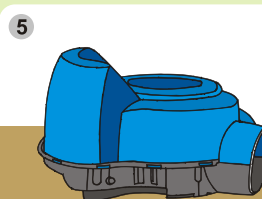


5  
Place the V-Trap in the foundation

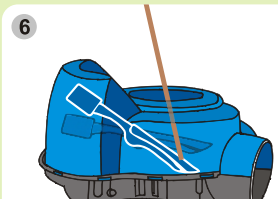


6  
Switch the flap door during Pit change

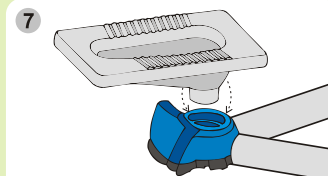

7  
Now attach the pan with opening on the top and pipes on the sides

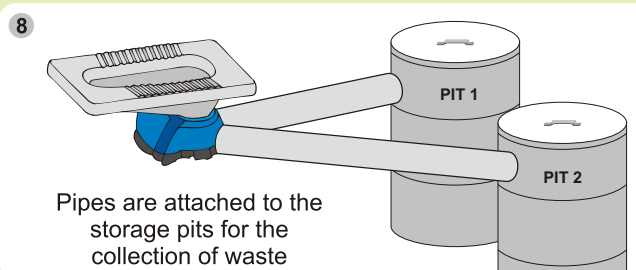

8  
Pipes are attached to the storage pits for the collection of waste

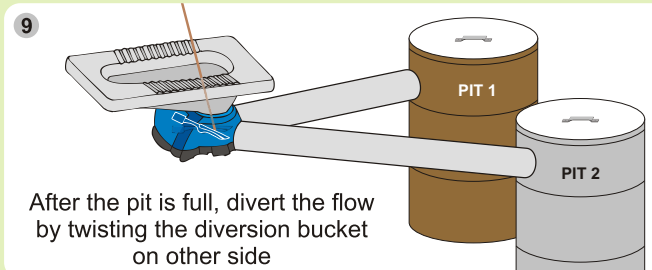

9  
After the pit is full, divert the flow by twisting the diversion bucket on other side

# LIXIL

Registered Office:  
**LIXIL INDIA PVT. LTD.**  
504-505, 5th Floor, Ratan Galaxie,  
Nehru Road, Mulund West, Mumbai,  
Maharashtra, INDIA, 400080

Correspondence Address:  
**LIXIL INDIA PVT. LTD.**  
Baani, Address One, 10th Floor,  
Golf Course Road, Gurugram-122011  
Tel.: +91 124 493 000,  
E-mail ID: sato.india@lixil.com  
Website: www.sato.lixil.com