

SATO TAP Hand Washing Station

INSTRUCTION MANUAL



Thank you for purchasing SATO Tap!

From your friends at SATO, we hope you will enjoy using SATO Tap with your loved ones to maintain hand hygiene for years to come.

Please read these instructions carefully, and visit us at www.sato.lixil.com/satotap for more information.

Assembly



SATO Tap consists of two parts, Nozzle and Base.



Orient the soap dish to the desired side, and align the nozzle accordingly.

(Tip) Soap dish can be oriented to be on the left or right hand side.



Press the nozzle until it snaps into the attachment holes of the base.



Assembly complete.

(Tip) If needed, nozzle can be removed by spreading the base and disengaging the nozzle.

Water Bottle: Selection and Installation



SATO Tap is designed to work with many clear plastic beverage bottles with cap size of roughly 30mm in diameter. Recommended bottle size: 1L to 2.5L



If possible, prepare 2 or 3 clear bottles to use as reserves.

(Tip) It is recommended to leave the filled water bottles outside in the sun to help disinfect water.



Set the bottle into SATO Tap. Do this operation swiftly to not pour too much water into the nozzle.



Water bottle setup complete.

(Tip) If water comes out from nozzle in OFF position, the bottle is not suitable for use with SATO Tap.

(Tip) Use up the water in the bottle completely until no water comes out of nozzle, before setting next bottle.

Do not use SATO Tap to dispense water for drinking.


Placement



Place SATO Tap on flat, level surface near frequently used locations such as food preparation areas and toilets.



(Optional) Secure the unit using nails and screws through mounting holes at the bottom of base.

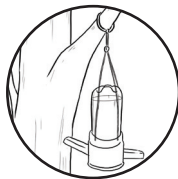

Alternatively, SATO Tap can be hung from structures and trees by running a rope through four holes located at the top of base.

Suggested rope length: 2 meters

Operation



Ensure there is soap in soap dish.

Lightly tap the front of nozzle downwards to start dispensing water. Use forearms and elbows.

(Tip) SATO Tap soap dish accommodates soap bars and most liquid soap dispensers.



To turn water off, raise the front of nozzle up, or tap the back of nozzle downwards. Again, use forearms and elbows to minimize contamination of hands.



(Tip) Proper hand washing sequence:

1. Turn water ON
2. Wet hands with water and soap
3. Turn water OFF
4. Scrub hands and wrists for 20 seconds
5. Turn water ON
6. Rinse hands and wrists
7. Turn water OFF
8. Dry hands and wrists

Maintenance



- Clean outside surface of the unit with damp cloth.
- Periodically drain excess water out of soap dish and wipe clean, to keep soap dish clean and dry.
- If the inside of nozzle requires cleaning or if foreign object got in the nozzle, remove nozzle and clean by covering the openings by hand and vigorously shaking water inside, and dumping out the water.

More information on www.sato.lixil.com/satotap